 



Manual Firmware Update using the nRF Device Firmware Update App

Instructions

1. Download the firmware zip file to your mobile device using the link in the FAQ.
2. Install the nRF DFU app from the links in the FAQ.
3. Start the app.

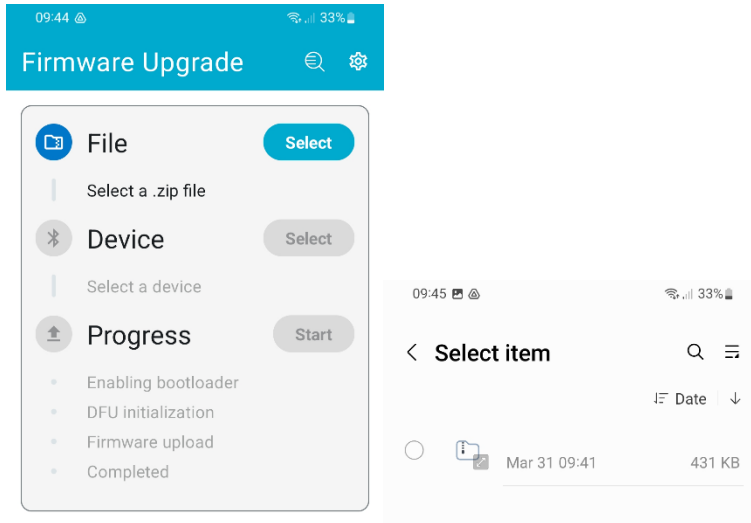

 4. Click File Select
5. Locate and select the downloaded firmware zip file (Aomei00_dfu_202302232302-LATEST.zip).
6. Click Device Select
7. Select your BT device from the list.

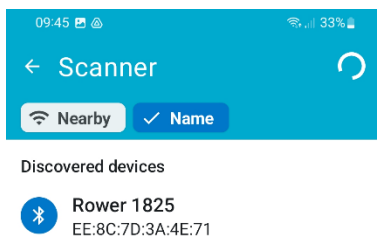

8. Click Start

- The app will show DFU progress and successful completion.
- The console will restart when the update is complete.

